



Stylique

Operation Manual

 


#9951

OPERATING INSTRUCTIONS

BATTERY INSTALLATION/REPLACEMENT

1. Remove battery compartment cover from back of trimmer by sliding it down.
 2. Insert one AA alkaline battery into trimmer as shown.
 3. Replace battery compartment cover to its original position.
- NOTE: To maximize battery life, trimmer should be shut "OFF" immediately after each use.



CLEANING YOUR TRIMMER

Clean after each use. Turn the trimmer "OFF" and slide the cleaning brush down and out of its groove in the trimmer body. Brush hairs from the cutting head. DO NOT wash or rinse any part of the trimmer with water.

Apply a drop or two of oil to the blade and turn the trimmer "ON" for one or two seconds to evenly distribute the oil. DO NOT over oil. Always replace the protective blade cover before storing the trimmer.

BEFORE TRIMMING

Remove the protective blade cover and turn the trimmer "ON". You're now ready to trim. Guide the blades slowly to the area to be trimmed.

BE CREATIVE

Your Wahl trimmer is designed to allow you to edge, trim, shape, and create lines and designs. Be creative, but work slowly. DO NOT force the trimmer through the hair. Let trimmer do the work.

To create lines, hold the trimmer as shown and trim gently. For wider lines, start at the top and pull downward. For straight lines, use a ruler or other straight edge as a guide.

ONE-YEAR LIMITED WARRANTY

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades, which are "wear out" parts. Please mail your product prepaid to Wahl Clipper Corporation, Wahl Annex, 2900 N. Locust Street, Sterling, Illinois, 61081, Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. This warranty is void and no repair or replacement will be made under this warranty or otherwise if: 1) The product is modified in any manner. 2) The product is repaired by anyone other than Wahl Clipper Corporation. 3) The product has been subject to unreasonable use. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use, is limited to the one year period provided in this express warranty. Some states may not allow such limitations, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributors' warranty.