



# Quick Start Guide

## Keep it Running Like New!

The blades of your new clipper should be oiled every few haircuts.

For best results, place three drops on front of the blades and one drop on each side of blade as shown. Use only the Wahl Clipper Oil included in the pack. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.



## Too Noisy?

(A) Oil blades as noted on this sheet.

(B) You can reduce the "clatter sound" by adjusting the power screw. The power screw was adjusted for peak efficiency before leaving the factory. However, if voltage in your home is too high or low, The clipper power screw may need adjustment.



### Adjust Power Screw to Reduce Clipper Noise (excessive clattering)

1. Turn your clipper "ON"
2. Use the end of the cleaning brush or a screwdriver to turn power screw in a COUNTER CLOCKWISE direction until clatter goes away.

## Max Power!


### Adjusting Power Screw for Maximum Power Setting

1. Turn your clipper "ON"
2. Use the end of the cleaning brush or a screwdriver to turn power screw in a CLOCKWISE direction until you hear a clattering noise.
3. Then turn power screw in opposite direction (COUNTER CLOCKWISE) until clattering stops.

## Goof- Proof!

### Adding Attachment Guards

Align guard onto blade then press down where guard number is located until you hear a snap.

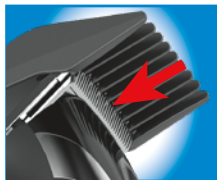

### Removing Attachment Guards

From underneath, lift tab up to release from blade.



## Blend it!

Use for blending between different hair lengths. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut. (Up position = closest cut; Down position = longest cut)



## Your New Clipper



## You can do it!



### Haircutting Tips & Techniques

When you cut your hair, you should visualize the head as if it were divided into four sections. Image above shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results. See instruction book for more tips.



## It's Easy!

Easy step-by-step instructions included. For more haircutting tips and techniques visit [wahlUSA.com](http://wahlUSA.com).

### Helpful Hints

Use brush included to clean out excess hair on clipper and between blades (don't clean with running water)

SAFETY FIRST! Please read instruction book first before using clipper

If defective contact Wahl via 1-800-767-9245

v. 09.2019  
©2019 part no: 92365-1302



## 21 Piece Kit



# Chrome Pro®

## COMPLETE HAIRCUTTING KIT

### Thank You!

Thank you for purchasing this Wahl haircutting kit.

We appreciate your support and we hope you enjoy your new clipper!

If you have any questions, please contact one of our USA based customer service representatives located next to our factory in Sterling, IL USA.



[help@wahlclipper.com](mailto:help@wahlclipper.com)



1.800.767.9245  
(M-F 7:30am - 4:30pm CST)



[wahlUSA.com](http://wahlUSA.com)



Find us on social media:  
@WAHLGROOMING



Quick Start Guide ▶