




GroomsMan®

Detachable Blade Trimmer
Recortadora con Láminas Desmontable

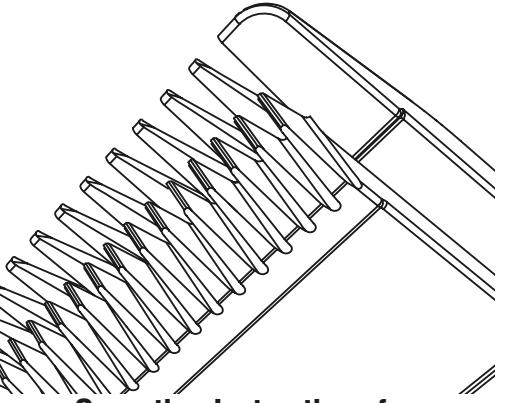

Operating Instructions for Rechargeable Grooming Kits Instrucciones de Operación de la Recortadora Recargable

Models 5598, 9855, 9893, 9894


SPECIAL FEATURES:

Your trimmer has been designed with several advanced features to help you get perfect results every time you trim. Your trimmer may be used to neatly trim goatees, beards, mustaches, neckline, sideburns around the ears and eyebrows, or anywhere you may need grooming. It also makes a great all-around family trimmer for mini haircuts and touch ups between trips to the barber or to clean up the shape of the neck.

■ Soft-Touch Grip allows you to hold the trimmer in a comfortable position for precision trimming.

■ A Multi-Position Trimming Guide (not included in all kits) makes achieving a consistent trim easy every time. The guide can be removed and reattached without changing the preset cutting length, so once you have found the perfect length, there's no guesswork in achieving it every trim. The trimming guide is a two-piece assembly, consisting of a base and a comb. It should not be disassembled.

To attach the guide, simply slide it on at a slight angle and press the release tab down to secure in position. To remove the guide, gently push up on the release tab and slide the assembly away from the trimmer. Adjust the trimming length by pressing on the thumb lever and moving the comb forward or backward to the desired setting.

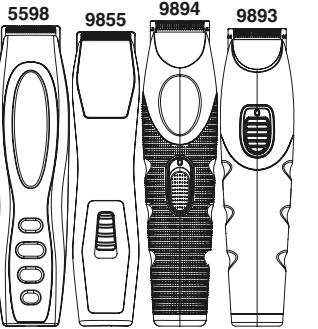

■ A Detachable Blade System enables you to quickly change from a standard-width blade for full grooming to a narrow-width blade for detail trimming around a mustache, goatee, or anywhere to define the hair line and clip any stray whiskers.



To remove attachment, simply pull top edge of blade away from body unit. To attach, align back tab of attachment head to cavity on the inner edge of trimmer unit and push down on top of blade.

Should blades become damaged or dull or if you want additional attachment heads for your trimmer, you may purchase them from Wahl. See the ACCESSORY SHEET in this kit for ordering information.


■ Self-Sharpening Blades are high compression, high-carbon steel, made to maintain their shape and sharpness for extended periods.

TRIMMING WITH ATTACHMENT COMBS



These attachments are ideal for blending, tapering and defining beards, as well as for achieving a "close trim" stubble look around the face. To use the attachments, go with the hair direction. To achieve closer looks, go against the hair direction.

To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the trimmer blade.

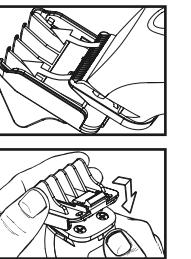

5-YEAR LIMITED WARRANTY

Valid in U.S.A. Only

If your Wahl product fails to operate satisfactorily within five (5) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you FREE OF CHARGE. Do not return this product to store where purchased. Products needing repair under this warranty should be returned with postage pre-paid to the following address or call 1-800-767-9245 for assistance:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

When mailing, please include a note describing the defect and the date of original purchase or receipt as a gift. Products out of warranty will be repaired at our standard repair charges.

This warranty does not cover products damaged by:

1. Modification or repair by anyone other than Wahl Clipper Corporation or a Wahl authorized service center;
2. Commercial (non-consumer) use or unreasonable use.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No other written express warranty is given. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

For more information or Product Registration, visit WahlUSA.com

© 2019 Wahl Clipper Corporation
Part No. 91646-502
Printed in China

SAVE THESE INSTRUCTIONS For Household Use Only

RECHARGING

1. This trimmer is conveniently designed for household use. It should be allowed to charge overnight before first use.
2. Remove the trimmer, recharging transformer and accessories from the packing material.
3. Connect the transformer to the trimmer. BE SURE TRIMMER IS IN THE "OFF - 0" POSITION WHEN CHARGING.
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage.
5. When trimmer is low in power, it should be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to continuously charge the battery without overcharging.
6. Ni-MH battery life may be extended with the following procedure: Once every month, let the trimmer run until the motor stops. Move the switch to the "OFF - 0" position and recharge fully overnight.

TROUBLESHOOTING


If your trimmer does not seem to take a charge, check the following before returning it for repair:

1. Check outlet to make sure it is working by plugging in another appliance.
2. Make sure the outlet simply is not connected to a light switch which turns the power at the outlet off when lights are turned off.
3. Be sure the trimmer is properly connected to the recharging transformer, all connections are secure and the switch on the trimmer is turned "OFF - 0".
4. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If trimmer does not run and it is completely charged, turn the unit "ON - I" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)


BATTERY REMOVAL AND DISPOSAL

Under normal use, the rechargeable Ni-MH battery in your trimmer will last from three to five years. At the end of its life, when it will no longer take a full charge, the Ni-MH battery must be removed and recycled or disposed of properly. Do not attempt to replace the battery. All servicing or battery replacement should be performed by an Authorized WAHL Service Location. To remove the battery for recycling or disposal, follow these steps:


1. Make sure the on/off switch is in the "0" (OFF) position and that the cord is NOT plugged into the trimmer or any electrical outlet.
2. Pry off front plate (5598). Cut open rubberized grip pad (9855).
3. Remove the screws under the front chrome piece (5598, 9893).
4. Pry the trimmer housing apart.
5. Locate circuit board and battery.
6. Pry battery off of circuit board.

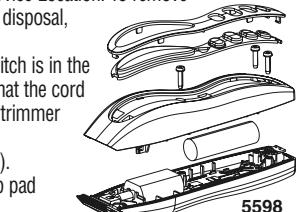

7. Apply tape to both ends of the battery before recycling or properly disposing of it.
8. Discard the entire trimmer.

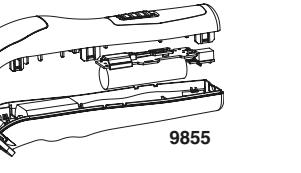


9. Remove the screws under the front chrome piece (9893, 9894).
10. Pry the trimmer housing apart.
11. Pry the circuit board and battery off of the trimmer housing.
12. Discard the entire trimmer.

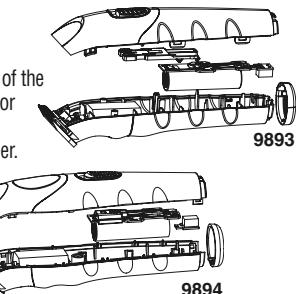

13. Discard the entire trimmer.

CARING FOR YOUR TRIMMER OILING BLADES

For best results, use Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil.

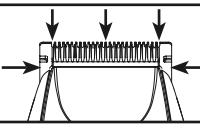

When oiling your trimmer, turn the trimmer "ON - I," hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Never rinse the blades with water, or the blades may rust. Clean with the included brush.

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. For units with a soft-touch grip, use a damp cloth to wipe down the body of the trimmer, taking care not to get the blades wet. Store unit in such a manner so that blades are protected from damage.

When the trimmer is not in use, the trimmer blade guard attachment should be in place to protect the blades.

This appliance should be stored in a manner where it is not subjected to crushing, heating above 100°C (212°F), or incineration.

SERVICE AND REPAIR

If you have problems with your shaver, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation
Attn: Repair Department
3001 Locust Street
Sterling, IL 61081
Telephone (800) 767-9245

For products purchased outside the United States, contact your distributor.

60 Day Money Back Guarantee!

If for any reason within 60 days of purchase of your Wahl® trimmer you are not satisfied with your trimmer and would like a refund, just return your trimmer, together with the sales receipt, to the retailer from whom you purchased it. Wahl will reimburse all retailers who accept trimmers within 60 days of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-767-9245 in the United States.

brush provided.

TRIMMING PRIVATE AREAS WITH THE TRIMMER & DETAILER HEAD

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you.

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.
2. Attach the trimming guide to trim and taper your beard. Begin with the guide set at a long trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter than the marked length.

Adjust the trimming guide to progressively shorter settings until you reach the desired length of beard. You may wish to set the trimming guide attachment to cut closer near the ear and down under the chin, changing to a longer setting toward the front of the face and point of your chin. When the trimming guide is removed, it will remain at its last length setting until you change it.

3. Define the upper part of your beard using the same technique.
4. For a neater finished look, replace attachment blade to the detail blade forward. Use this blade for fine, detail trimming anywhere it is needed, such as at the sideburns near the ears, goatees, etc.
5. For hard to reach or tight areas, use the detailer head. Always pull skin taut. Then slowly move the detailer through area to trim until desired look is accomplished.
6. Shave in your private areas by gently shaving in the desired area and always keep the skin taut.

DETAILING NECKLINES, SIDEBURNS, MUSTACHES & BEARDS USING TRIMMER HEAD

Slowly move trimmer downward on desired areas to neatly trim and shape.

TRIMMING ARM & LEG HAIR USING TRIMMER HEAD

Simply glide the trimmer over your arm or leg until desired hair length is achieved. The first time you trim the hair, start by using a longer setting on the guide comb on the trimmer, then use progressively shorter settings if a shorter length is preferred.

TRIMMING CHEST & STOMACH USING TRIMMER HEAD

Glide the trimmer over your torso region, in an upward motion until desired hair length is achieved. For tight, scratch-free trimming, use the #1 guide comb.

TRIMMING EAR HAIR USING DETAILER HEAD

Make sure the outer areas of the ears do not contain any wax.

Hold the ear flat with one hand and carefully insert detailler no more than 1/4-inch into the outer ear.

CAUTION: Do not insert the detailler or any other foreign object into the inner ear. For hair growing on the outside of the ear, simply move the detailler slowly along the edges of the ear.

TRIMMING EYEBROWS USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING NOSE HAIR USING DETAILER HEAD

Make sure the nasal passages are clean.

Slowly move the detailler in and out of each nostril, no more than 1/4-inch deep.

TRIMMING EYEBROWS USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON FACE USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON BODY USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON HAIRLINE USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON HAIRLINE USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON HAIRLINE USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON HAIRLINE USING DETAILER HEAD

Slowly move detailler to neatly trim stray hairs.

For precise, even trimming, slowly move the detailler closer or farther away from eyebrows to achieve desired length.

Do not press against brow as it may remove too much hair.

TRIMMING HAIR ON HAIRLINE USING DETAILER HEAD</

GUARDE ESTAS INSTRUCCIONES Solamente Para Uso Residencial INSTRUCCIONES DE RECARGA

LOCALIZACIÓN Y REPARACIÓN DE FALLAS

- Si su recortadora no parece cargarse, compruebe lo siguiente antes de enviarla para su reparación.
1. Compruebe la corriente del enchufe, enchufando otro aparato.
 2. Asegúrese de que la toma no esté simplemente conectada a un interruptor de luz que desconecte la corriente cuando se apaguen las luces.
 3. Asegúrese de que la recortadora esté bien conectada al transformador de recarga, todas las conexiones sean buenas y el interruptor de la recortadora esté apagado "OFF - 0".
 4. Si la electricidad está conectada a un interruptor de corriente principal, sugerimos que se desconecte la recortadora del cargador en cualquier momento en que el interruptor principal esté en la posición de apagado. Al dejar la unidad enchufada en una toma desconectada o cargador desenchufado se drenará la pila.
 5. Si la recortadora no funciona y está completamente cargada, ponga la unidad en la posición de encendido "ON - I" y pellizque o empuje las hojas manualmente. (Puede haber aceite seco entre las hojas, por lo que pueden haberse quedado atascadas temporalmente.)



CONTIENE UNA PILA SELLADA RECARGABLE DE NIQUÉL-CADMIO. DEBE RECICLARSE O EVACUARSE DE FORMA APROPIADA

El sello de reciclado de pilas RBRC de la pila de níquel-cadmio (Ni-Cd) contenido en este producto indica que Wahl es un participante voluntario de un programa de la industria para recoger y reciclar estas pilas al final de su vida útil, cuando se retiran del servicio en Estados Unidos o Canadá. El programa RBRC constituye una alternativa conveniente a la evacuación de pilas de Ni-Cd usadas en la basura o desechos municipales, lo que es ilegal en algunas áreas. Llame a 1-800-8-BATTERY para pedir información sobre el reciclado de pilas de Ni-Cd en su área. La participación de Wahl en este programa forma parte de nuestro compromiso de preservar nuestro medio ambiente y conservar nuestros recursos naturales.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

DESHECHO Y RECICLADO DE LA PILA

Usándola de forma normal, la pila recargable de Ni-MH en su cortadora, puede durar de tres a cinco años. Al final de la vida de la pila, cuando ya no pueda cargarse otra vez completamente, la pila de Ni-MH, debe sacarse, reciclarse o deshecharse apropiadamente. No intente reemplazar la pila. Cualquier servicio o reemplazo de la pila debe ser realizado por un servicio autorizado de Wahl. Para sacar o desconectar la pila, siga los siguientes pasos:

1. Asegúrese que el interruptor on/off esté en "0" (OFF) y que el cordón no esté enchufado a la recortadora ó a cualquier abertura eléctrica.
2. Quitar la placa frontal haciendo palanca (5598). Corte el material de goma en el área de agarre de la recortadora (9855). Retire la tapa (9893, 9894).
3. Retire los tornillos que se encuentran debajo de la pieza frontal cromada (5598, 9893).
4. Después de haber sacado los tornillos proceda a abrir la recortadora.

5. Localice el área de circuito y de la batería.

6. Saque la batería del circuito

7. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

8. Deseche la recortadora.

9. Localice el área de circuito y de la batería.

10. Saque la batería del circuito

11. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

12. Deseche la recortadora.

13. Localice el área de circuito y de la batería.

14. Saque la batería del circuito

15. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

16. Deseche la recortadora.

17. Localice el área de circuito y de la batería.

18. Saque la batería del circuito

19. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

20. Deseche la recortadora.

21. Localice el área de circuito y de la batería.

22. Saque la batería del circuito

23. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

24. Deseche la recortadora.

25. Localice el área de circuito y de la batería.

26. Saque la batería del circuito

27. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

28. Deseche la recortadora.

29. Localice el área de circuito y de la batería.

30. Saque la batería del circuito

31. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

32. Deseche la recortadora.

33. Localice el área de circuito y de la batería.

34. Saque la batería del circuito

35. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

36. Deseche la recortadora.

37. Localice el área de circuito y de la batería.

38. Saque la batería del circuito

39. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

40. Deseche la recortadora.

41. Localice el área de circuito y de la batería.

42. Saque la batería del circuito

43. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

44. Deseche la recortadora.

45. Localice el área de circuito y de la batería.

46. Saque la batería del circuito

47. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

48. Deseche la recortadora.

49. Localice el área de circuito y de la batería.

50. Saque la batería del circuito

51. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

52. Deseche la recortadora.

53. Localice el área de circuito y de la batería.

54. Saque la batería del circuito

55. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

56. Deseche la recortadora.

57. Localice el área de circuito y de la batería.

58. Saque la batería del circuito

59. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

60. Deseche la recortadora.

61. Localice el área de circuito y de la batería.

62. Saque la batería del circuito

63. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

64. Deseche la recortadora.

65. Localice el área de circuito y de la batería.

66. Saque la batería del circuito

67. Antes de reciclar la batería aplique cintas adhesivas (tape) en ambos extremos de la batería.

68. D